

# Air Hoist

7790-A and 7792-A Series



---

## Operator's Manual



**Save These Instructions**

Only allow **Ingersoll Rand** trained technicians to perform maintenance on this product. For additional information contact **Ingersoll Rand** factory or nearest Distributor.

**Manuals can be downloaded from [ingersollrand.com](http://ingersollrand.com)**

The use of other than genuine **Ingersoll Rand** replacement parts may result in safety hazards, decreased performance and increased maintenance and will invalidate all warranties.

Original instructions are in English. Other languages are a translation of the original instructions.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.

# Table of Contents

Safety Information .....	5
Operating Precautions .....	5
Lubrication .....	6
Routine Lubrication Requirements .....	6
Air Supply Requirements .....	6
Recommended Lubricants .....	6
Operation .....	7
Suspending Hoist Adjusting Brake .....	7
Hook Suspended Models .....	7
Trolley Suspended Models .....	7
Adjusting Brake .....	8
Setting Maximum Up and Down Speeds .....	8
Chain Stop .....	8
Before Securing Load to Lift Chain .....	8
Securing Load to Lift Chain .....	9
Lifting and Lowering Load .....	9
Load Chain Removal .....	9
Load Chain Installation .....	9
Routine Inspection .....	10
Load Chain and Anchor Points .....	10
Hooks and Suspension .....	10
Brake .....	11
Gears, Bearings and Pocketwheel .....	11
Throttle Valve Head and Gears .....	11
Air Motor .....	11
Maintenance .....	12
Disassembly .....	12
Head Disassembly .....	12
Pendent Control Disassembly .....	13
Pendent Cylinder Disassembly .....	13
Motor Disassembly .....	13
Brake and Gearing Disassembly .....	13
Housing Disassembly .....	13
Upper Hook Disassembly .....	14
Lower Hook Disassembly .....	14
Assembly .....	15
Brake and Gearing Assembly .....	15
Housing Assembly .....	15
Upper Hook Assembly .....	16
Lower Hook Assembly .....	16
Pendent Control Assembly .....	16
Pendent Cylinder Assembly .....	16

Motor Assembly.....	17
Trolley Assembly and Pull Chain Control Assembly .....	18
Brake and Gearing Section Drawing.....	19
Upper Hook and Lower Hook Assembly .....	20
Housing Assembly Drawing .....	21
Pendant Control Assembly Drawing.....	22
7790-A and 7792-A Series Parts List .....	23
Parts List for Model Identification and Spark Resistant .....	29

# Safety Information

## Operating Precautions

To aid the operator's understanding of proper and safe use of hoists, the publication "Overhead Hoists", ANSI B30.16-1981, can be purchased from:

American Standards Institute, Inc.  
1430 Broadway  
New York, New York 10018

- Do not use the hoist described in this manual to lift or transport humans.
- Never try to lift a load heavier than the rated capacity of the hoist.
- Operate hoist with caution. Operator should have a good attitude toward safety.
- Always follow "proper operating" instructions given in this manual.
- Allow only people who have received training in "proper hoist operation" to operate hoists.
- Follow all operating and routine inspection procedures prescribed in this manual.
- Operator of hoist shall operate hoist in a position that will not be hazardous to his health.
- Do not attempt to operate hoist if it is not operating properly.
- Before operating hoist, all routine inspection and lubrication procedures should be completed.

# Lubrication

## Routine Lubrication Requirements

Lack of or an excessive amount of lubrication will affect the performance and life of this tool Use only recommended lubricants at below time intervals:

**Every 8 Hours Of Tool Operation** — fill lubricator reservoir with spindle oil (29665). If an in line or air line lubricator is not used, fill oil reservoir of built-in oiler of hoist head.

**Every 80 Hours Of Hoist Operation** — Grease fittings in lower Block Hook Assembly and Trolley Wheels with NLGI #1 grease 33153).

**Every 160 Hours Of Hoist Operation** — Fill oil reservoir in Gear Chamber with "EP" gear oil (40164). Coat load chain of hoist with EP" gear oil (40164).

## Air Supply Requirements

For maximum operating efficiency, the following Air supply specifications should be maintained to this hoist:

- Air Pressure - 90 PSIG (6 bar)
- Air Filtration - 50 micron
- Lubricated Air Supply
- Hose Size - 1/2" (13 mm) I.D

An ARO model 128241-800 airline Filter/Regulator/ Lubricator (F-R-L) is recommended to maintain the above Air supply specifications.

## Recommended Lubricants

After disassembly is complete all parts, except sealed or shielded bearings, should be washed with solvent. To relubricate parts, or for routine lubrication, use the following recommended lubricants:

Where Used	ARO Part#	Description
Air Motor	29665	1 qt. Spindle Oil
Gears and Bearings	33153	5 lb. "EP" - NLGI #1Grease
"O" Rings and Lip Seals	36460	4 oz. Stringy Lubricant
Gearing Oil Chamber	40164	1 qt. "EP" Gear Oil

# Operation


## Suspending Hoist Adjusting Brake

Always select an overhead support capable of supporting combined weight of hoist, trolley, and hoist's load capacity.

## Hook Suspended Models

- Upper hook should be firmly seated in center of hook saddle and that safety latch is closed.
- 43059 secondary support cable is recommended.


**Figure 1. MHP4705**

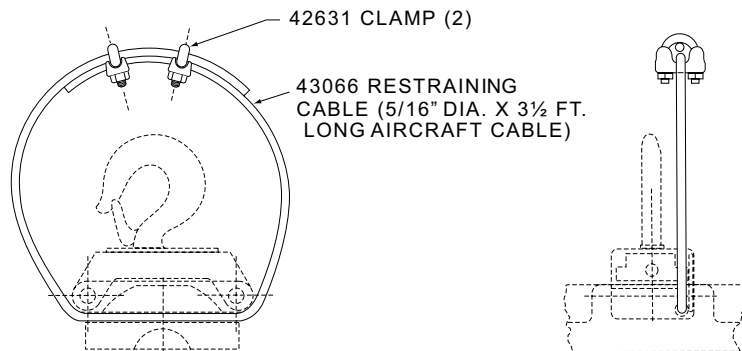

## Trolley Suspended Models

- Be sure Trolley Wheels are compatible with beam being used.
- Width between outside of Trolley Wheels should be the width of beam flange + 1/2".
- If 43111 - 90' Adapter is used, mount to hoist before attempting to install trolley.
- Width is varied by using Spacers between the hoist body and the trolley Side Plates.
- Insert an equal number of Spacers on each inside of the trolley Side Plates until beam flange + 1/2" measurement is reached. Side Plates must be vertical.
- Insert Shafts (43009) through hoist, or adapter if used, and trolley Side Plates.
- Position trolley and hoist assembly on beam.
- Put an equal number of Spacers on each end of Shafts (43009) with lock washer being last.
- Tighten nuts on Shafts (43009). Shafts should extend all the way through the Nuts.
- Move trolley over entire length of beam. If it appears the trolley Side Plates can be moved closer together and freedom of movement will be maintained, remove an equal number of Spacers from inside the Side Plates and assemble these Spacers to the outside of the Side Plates.
- Tighten Nuts to 25-30 ft. lb.
- Connect sufficient length of air hose to reach the maximum travel distance of trolley.


**Figure 2. MHP4706**

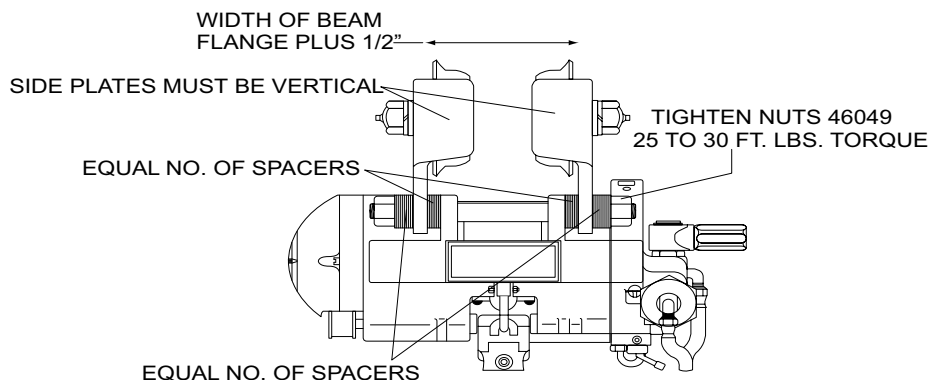

### Adjusting Brake

- Properly attach rated load of hoist to load chain hook.
- Slowly raise load to 6" height above floor by slowly pulling pull chain handle or depressing pendent control.
- Release pull chain handle or pendent control.
- If load starts to lower, tighten brake adjustment by turning counter-clockwise until load stops lowering.
- Do not over tighten brake. If brake is too tight, the lifting and lowering of load will be erratic, not smooth.


Figure 3. MHP4707

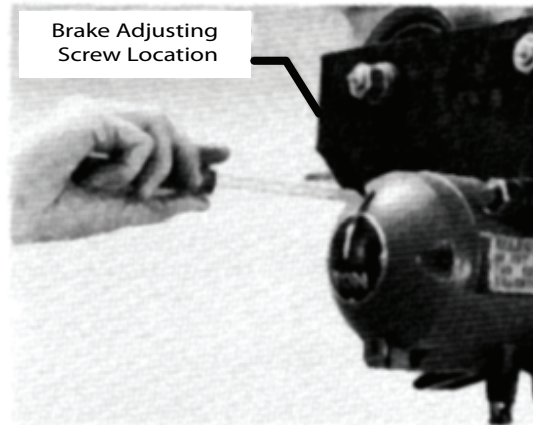

### Setting Maximum Up and Down Speeds

- Never attempt to adjust speed regulator valves on spark resistant hoists. They are preset by ARO.
- Attach rated load of hoist to load chain hook.
- Turn speed regulator valves clockwise until they stop. This is lowest setting.
- Lift load by pulling pull chain or depressing pendent control completely. As load is being lifted, turn up speed regulator valve counter-clockwise to set the hoist at the desired maximum "lift" speed.
- Lower load by pulling pull chain or depressing pendent control completely. As load is lowered, turn "DN" speed regulator valve counter-clockwise to set the hoist at the desired maximum "lowering" speed.
- The pull chain or pendent control is used as the variable control of lift and lowering speeds up to the maximum speed set by the speed regulator valves.

Figure 4. MHP4708

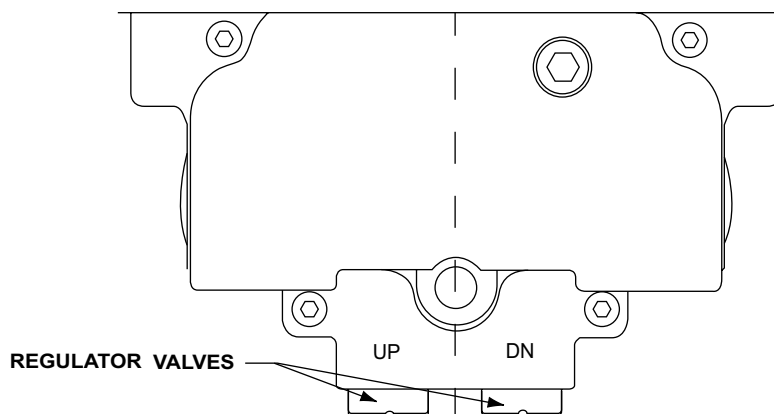

### Chain Stop

- Do not operate hoist unless chain stop is properly attached to hoist load chain.
- Do not use chain stop to limit the distance the load is to be lifted. The function of the chain stop is to keep the lower hook components from striking the control arm should an over-run condition ever occur.

Installation instructions should be completed before attempting to operate the hoist.

### Before Securing Load to Lift Chain

- Perform routine inspection and lubrication procedures.



## Securing Load to Lift Chain

- Do Not Wrap Load Chain Around Load. Approved slings or other approved devices should be used to provide adequate single point securing of load to hoist load chain hook. Be sure safety latch on hook is closed.
- Be sure load chain is not twisted or kinked.
- Hoist should be centered over the load. Always secure load chain hook to center of load. Never lift a load from the side or end.
- Allow only a sufficient amount of slack in load chain to permit attaching hook to load.

## Lifting and Lowering Load

1. Pull (pull chain models) or depress (pendent control models) controls slowly to eliminate abrupt, jerky operation.
2. Take up slack in chain slowly.
3. Speed of load lifting can be controlled by the pull chain or pendent control. Pulling the chain further or depressing the pendent further will result in a faster speed.

## Load Chain Removal

- Drive out Roll pin (106) and remove clevis from chain.
- If a chain basket is being used with hoist, remove chain stop from end of chain.
- 2-Ton models with double reeved chain; remove Retaining Ring (110) and Pin (111) from Anchor Bracket (112).
- Pull down on one end of Control Arm (68) to release brake and pull chain from housing.

## Load Chain Installation

- A new chain should never be used on a worn Pocketwheel. Replace chain and Pocketwheel as a pair.
- Place hoist in vise and clamp on upper hook mount.
- Remove Housing Cap (95), Brake Spring (94) and Brake Shoes (92).
- Turn Brake Wheel (93) by hand to rotate Pocketwheel while carefully feeding chain thru chain guide and around Pocketwheel (64).
- Pull sufficient chain thru housing to allow end link to be attached to anchor lug on housing.

### ⚠ CAUTION

!

**Chain must be positioned around Pocketwheel so weld on the standing links face outward from Pocketwheel - see 5MHP3429, p. 9.**

- End link of chain must also be positioned properly to permit attaching to anchor lug on housing without twisting of chain.


### ⚠ WARNING

!

**Do not attempt to feed chain over Pocketwheel by air power as chain will be pulled thru housing at a very fast rate.**

- Attach other end of chain to lower hook (or Anchor Bracket on 2-Ton models).

Figure 5. MHP3429

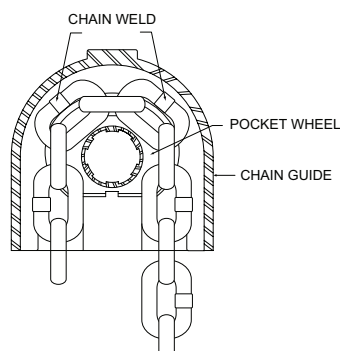

# Routine Inspection

The type of application for a hoist varies so greatly it is impractical to recommend an exact time-table for inspection of the hoist. Where hoist is subjected to continuous operation with capacity loads, it is recommended the unit be inspected twice a week. If the application is less demanding, the unit should be inspected twice a month. In general, the frequency of inspection should be determined by the severity of the application. The user of a hoist should be guided by any existing federal, state or local regulations governing the use, testing or inspection of the hoist.


If any damage or malfunction is evident do not operate hoist until all repairs have been made and hoist tested for proper operation.

The following points and areas are recommended for inspection:

## Load Chain and Anchor Points

- Visually check for nicked, gouged, twisted, bent, corroded, rusted, worn or broken links. Check ends of chain where chain is anchored to hoist frame and where chain is fastened to lower hook. Check anchors and pins.
- Check chain elongation with a Vernier Caliper as shown. If Visual Check Reveals No Defects, Proceed As Follows: Lay Used Chain On Flat Surface And Measure Between Five (5) Links As Shown [Figure 6, p. 10](#). Measurement Should Be Taken On Portion Of Chain Which Has Most Passed Over The Pocket Wheel. If Measurement Taken Is (Refer [Table 1, p. 10](#)) inches or more, Chain Should Be Replaced.

**Figure 6. MHP4709**

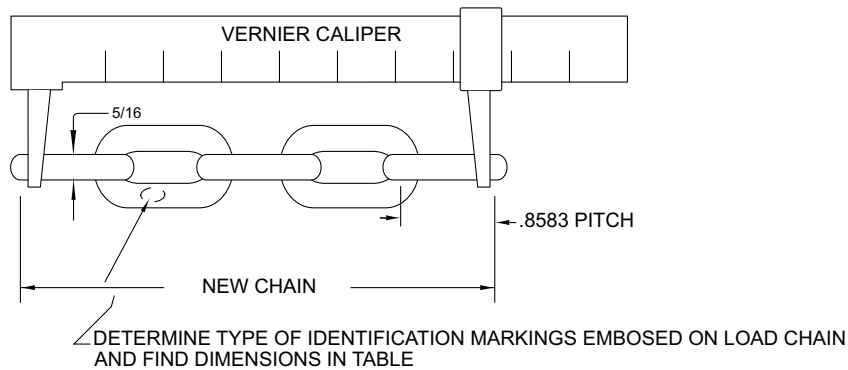

It is not inferred that a chain is safe prior to the occurrence of elongation of the chain. It is inferred Only, that when said elongation is evident, the chain must be replaced. Other factors, such as those mentioned as a visual check, may render chain unsafe long before replacement due to elongation is necessary.

**Note:** New chain should never be used on a worn Pocketwheel, replace chain and Pocketwheel as a pair. Chain should also be replaced when replacing brake shoes.


**Table 1. Load Chain Dimension**

Identification Markings	New Chain Measurement	Replace Chain
★ or ARO	4.291	4.366
OC	4.340	4.415

## Hooks and Suspension

- Check upper and lower hooks and related parts for bent, worn, cracked, broken or otherwise damaged parts.
- On trolley suspended models, check conditions of trolley parts, trolley adapter and related parts.
- Check for loose Bolts, Nuts, or Rivets.

**Figure 7. MHP4727**

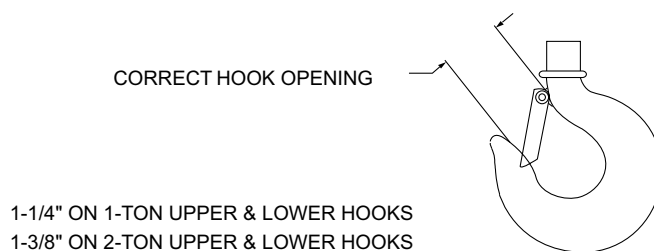

## Brake

1. Check brake operation - see "Adjusting Brake," p. 8.
2. Check brake linings and components.

## Gears, Bearings and Pocketwheel

- Check teeth on gears and motor shaft pinion.
- Check pockets of Pocketwheel.
- Check bearings for noisy operation indicating wear.


## Throttle Valve Head and Gears

- Check valve body, valves, and O-Rings on valves.
- Check gear teeth and bearings.

## Air Motor

- Check end faces of rotor for roughness and blade slots for wear or burrs. A new blade should slide in and out of slots without binding.
- Check blades for wear, warpage or other damage.
- Check cylinder bore diameter for rough circular grooves from scoring. A badly scored cylinder cannot be restored by honing since it will only enlarge bore diameter, widening seal point between rotor and cylinder, hindering free exhaust of air and result in loss of speed and power.
- Check end plates for wear or scoring. Check bearings.
- Follow all operating and routine inspection procedures prescribed in this manual.
- Disconnect Air supply from hoist before performing maintenance or service procedures.
- Never apply excessive pressure by a holding device which may cause distortion of a port.
- Apply pressure evenly to parts which have a press fit.
- Apply even pressure to the bearing race that will be press fitted to the mating part.
- Use correct tools and fixtures when servicing this tool.
- Do not damage O-Rings when servicing tool.
- Use only genuine ARO replacement parts for this tool. When ordering specify part number, description, tool model number and serial number.

Figure 8. MHP4728

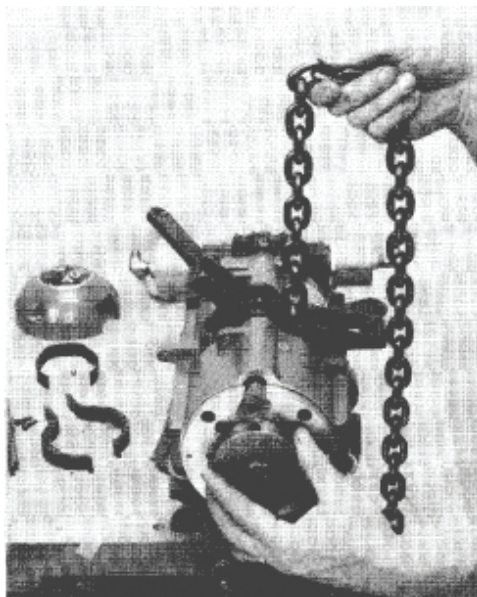

# Maintenance

## Dissassembly

### Head Disassembly

To remove head section from housing without disassembling head components, remove head with Control Rod (59) attached to Gear (25). To accomplish this:

1. Remove two Screws (96) and Housing Cap (95).
2. Drive out Roll Pin (61) and remove Brake Block (60).
3. Drive out Roll Pin (69) from Control Arm (68).
4. Remove six Screws (22) and Washers (23).
5. Remove head section and control rod from housing as one unit.

To disassemble head components without removing head section from hoist:

1. Remove two Screws (96) and Housing Cap (95).
2. Drive out Roll Pin (69) from Control Arm (68).
3. Drive out Roll Pin (26) from Gear (25) and drive Control Rod (59) back thru Gear (25) and remove gear.
4. Remove Adapters (19), Valves (17) and (29) and Valve Body (15).
5. Remove Set Screws (24) and Regulator Valves (28).

## ⚠ CAUTION




**Do not attempt to adjust or remove regulator valves (28) from spark-resistant hoist models - these valves are pre-set at factory.**

6. Remove Adapter (1) and Screen (2).
7. Remove Retaining Ring (4), Swivel (3), Swivel body (6) and Screen (8).
8. Remove two Screws (9), Washers (10), Exhaust Deflector (11), Screen (12) and Muffler Filler (13).

**Figure 9. MHP4726**


STEP 1 - POSITION HOIST SO YOU ARE FACING END WITH AIR INLET. WITH VALVE PARTS AND GEAR [25] REMOVED, PLACE VALVE BODY IN VALVE OPENING. INSERT FINGER IN EACH END OF VALVE OPENING AND ALIGN END OF VALVE BODY WITH ENDS OF BUSHING.

NOTE: VALVE BODY MUST BE INSTALLED WITH IDENTIFICATION MARK AS SHOWN.

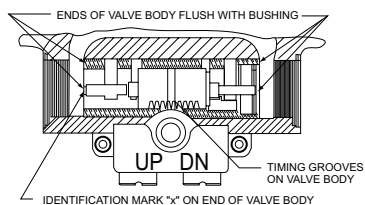


STEP 2 - WITH BRAKE RELEASE BLOCK ASSEMBLED TO CONTROL ROD, INSERT ROD THROUGH BRAKE END OF HOUSING, THROUGH CONTROL ARM [68] AND ON THROUGH HOUSING STOPPING BEFORE ROD PROTRUDES FROM HEAD.

ASSEMBLE GEAR [25] TO HEAD ALIGNING CENTER TOOTH OF GEAR BETWEEN TWO GROOVE MARKINGS ON THE VALVE BODY AS SHOWN. ASSEMBLE CONTROL ROD THROUGH GEAR AND SECURE WITH ROLL PIN [26]. SECURE CONTROL ARM TO ROD WITH ROLL PIN [69].

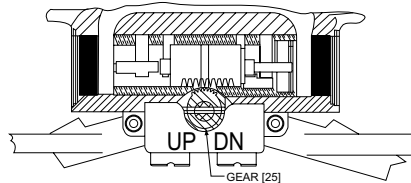

STEP 3 - ASSEMBLE O-RINGS [16] TO VALVES [17] AND [19] AND ASSEMBLE VALVES INTO HEAD AS SHOWN. ASSEMBLE O-RINGS [18] TO ADAPTERS [29] AND O-RINGS [20] TO VALVE CAPS [21] AND ASSEMBLE TO HEAD.

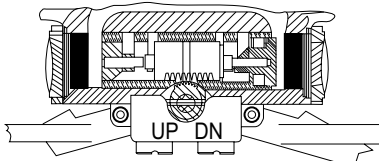

## Pendent Control Disassembly

1. Remove pendent hoses from Fittings (156) and (165).
2. Remove Adapter (166) from head releasing strain cable.
3. Remove Screws (168), Springs (170) and Valves (171).

## Pendent Cylinder Disassembly

1. Unthread Cylinder (157) from Adapter (163).

## Motor Disassembly

1. Remove head section - Refer "[Head Disassembly](#)," p. 12.
2. Remove motor from housing.
3. Remove Retaining Ring (36); Motor Assembly will come apart.

## Brake and Gearing Disassembly

1. Remove two Screws (96) and Housing Cap (95).
2. Carefully slide Brake Spring (94) part way off Brake Shoes (92) and using brake spring spreader (33541), remove Brake Spring (94).

### ⚠ CAUTION

!

**Remove Brake Spring (94) with due regard for safety as spring is assembled with considerable tension.**

3. Remove Brake Shoes (92) and Steel Balls (91).
4. Align hole in Brake Wheel (93) with hole in End Plate (89) and insert a punch or pin thru holes to secure Brake Wheel.
5. Remove Cotter Pin (74), Nut (99) and Washer (100).
6. Remove Brake Wheel (93).
7. Remove Roll Pin (61) and Brake Block (60).
8. Remove four Screws (103) and Washers (104).
9. Place blade type Screwdrivers, or similar tool, at opposite sides behind edge of End Plate (89) and pry out on End Plate to remove from housing.
10. Remove gearing assembly.
11. Remove Retaining Rings (70) and (82).
12. Push on threaded end of Shaft (72) and remove out opposite end of Gear Carrier (75).
13. Remove Bearing (80), Spacer (79) and Shafts (78), releasing Gears (77) and Bearing Races (76).
14. Remove Retaining Ring (83) and Bearing (81).
15. Remove four shoulder Screws (101) and Washers (102) and fixed Ring Gear (84).
16. Remove Seal (88) for replacement only.

## Housing Disassembly

1. Remove head, motor and gearing sections.
2. Remove Screws (67), Washers (66) and Plate (65).
3. Place brass or wood block in Pocketwheel cavity to prevent Shaft (50) from turning.
4. Remove Nut (58), Washer (57), O-Ring (56) and Ring Gear (55).
5. Remove Retaining Ring (46) from "Motor End" of housing.
6. Remove Shaft (50) with Bearing (47).
7. Remove Pocketwheel (64) and Chain Guide (63).
8. Remove Seal (52) for replacement only.

### Upper Hook Disassembly

1. Remove Nuts (153), Washers (152) and Bracket (150).
2. Drive out Roll Pin (147) - One-Ton Models. Roll pins (155) and (154) - Two-Ton Models.
3. Remove Collar (143) and Balls (144) - One-Ton Models. Collar (116), Thrust Bearing (120) and Bearing Races (119) - Two-Ton Models.

### Lower Hook Disassembly

#### 1-Ton Models

1. Remove Snap Ring (139).
2. Slide Snap Ring (139) and Sleeve (140) up on chain and remove Pin (146).
3. Separate Connector (142) from Bucket (145) and Remove Pin (141).
4. Drive out Roll Pin (147) and remove hook from Bucket (145).

#### 2-Ton Models

1. Remove Bolts (134), Washers (133) and Shrouds (130).
2. Remove Bolts (124), (129), Washers (125), and Spacers (126).
3. Remove Shaft (128), Spacers (127) and Sheave (114).
4. Drive out Roll Pins (118) and (117).
5. Remove Collar (116), Thrust Bearing (120), Bearing Races (119) and Hook (123).


# Assembly

## Brake and Gearing Assembly

1. Lubricate and assemble six O-Rings (86) into counterbores of fixed Ring Gear (84).
2. Assemble Seal (88) to End Plate (89) - lip of seal facing out.
3. Assemble wave Washer (87) and End Plate (89) to fixed Ring Gear (84) and secure with four Washers (102) and shoulder Screws (101).
4. Assemble Gears (77), Bearing Races (76) and Shafts (78) to Gear Carrier (75).
5. Assemble Spacer (79) to Gear Carrier aligning spacer with notched ends of Shafts (78).
6. Lubricate Bearings (73) and (80) with NLGI #1 "EP" grease (33153) and assemble to Gear Carrier (75).
7. Lubricate Bearing (71) with NLGI #1 "EP" grease (33153) and assemble to Shaft (72).
8. Assemble Shaft (72) to Gear Carrier (75) and secure with Retaining Ring (70).

**Important: Punch marks on Gears (77) indicating aligned teeth must be held in alignment with punch marks on Gear Carrier (75) when Shaft (72) to assembled to gear carrier.**

**Figure 10. MHP4729**

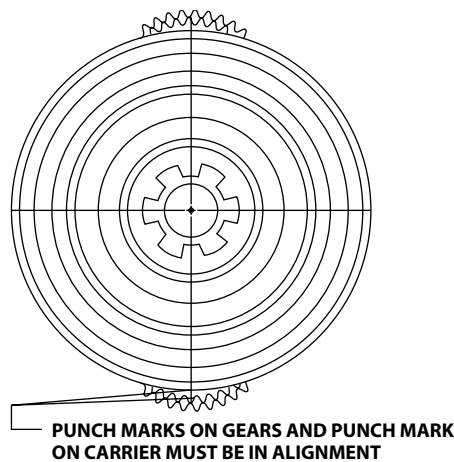

9. Lubricate Bearing (81) with NLGI #1 "EP" grease (33153) and assemble to Shaft (72).
10. Assemble Retaining Ring (82) and (83) to Shaft (72).
11. Assuming O-Ring (53) and Ring Gear (55) are assembled to housing (Refer "[Housing Assembly](#)," p. 15); assemble gearing into Ring Gear (55).
12. Lubricate and assemble O-Ring (54) over fixed Ring Gear (84) and slide up to End Plate.
13. Assemble fixed Ring Gear and End Plate to gearing and housing. Use reasonable caution so as not to damage Seal (88) in End Plate.
14. Secure end plate and components to housing with Washers (104) and Screws (103).
15. Assemble Brake Wheel (93) to Shaft (72) and secure with Washer (100), Nut (99) and Cotter Pin (74).
16. Assemble Control Rod (59) thru housing, Hangers (62) and Control Arm (68).
17. Secure Control Arm (68) to rod with Roll Pin (69).
18. Assemble Brake Block (60) and Roll Pin (61) to Control Arm (59).
19. Assemble Screw (90), Balls (91), Brake Shoes (92) and Brake Spring (94).
20. Assemble Housing Cap (95) and secure with two Screws (96). Refer "[Adjusting Brake](#)," p. 8.
21. Fill gearing oil chamber with 6 to 7 ounces (to lower plug hole level) "EP" gear oil (40164).

## Housing Assembly

1. Assemble Bearing (47) and Retaining Ring (46) to "brake end" of housing.
2. Assemble Chain Guide (63) and Pocketwheel (64) to housing.
3. Assemble Retaining Ring (48) and Bearing (47) to Shaft (50).
4. Insert Shaft (50) into housing and thru Pocketwheel (64) and Bearing (47).
5. Assemble Retaining Ring (46) to housing.

## Assembly

---

6. Assemble Plate (65), Washers (66) and Screws (67) to housing.
7. Assemble New Seal (52) into housing with lip of seal facing out.
8. Lubricate and assemble O-Ring (53) into groove in housing.
9. Assemble Ring Gear (55), O-Ring (56), Washer (57) and Nut (58).
10. Assemble motor, gearing and head sections to hoist.

## Upper Hook Assembly

1. Position hook on Bracket (150).
2. Apply a liberal amount of grease to groove of Collar (143) and assemble Eleven Balls (144) to Collar.
3. Slide collar and balls over shank of hook and secure with Roll Pin (147) - One-Ton Models.
4. Apply a liberal amount of grease to Thrust Bearing (120) and assemble Thrust Races (119) and Bearing (120) to shank of hook. Secure with Roll Pins (154) and (155) - Two-Ton Models.
5. Assemble Bracket (150), Shafts (151), Washers (152) and Nuts (153).

### **⚠ CAUTION**

**!**

**Do not over-tighten Nuts (153); tighten 25 to 30 ft. Ib.**

## Lower Hook Assembly

### **1-Ton Models**

1. Slide Snap Ring (139) and Sleeve (140) on end of load chain.
2. Position end of load chain in Connector (142) and secure with Pin (141).
3. Assemble Hook (149) to Bucket (145).
4. Apply a liberal amount of grease to groove of Collar (143) and assemble Eleven Balls (144) to Collar.
5. Assemble Collar (143) over shank of hook and secure with Roll Pin (147).
6. Assemble Bucket (145) to Connector (142) and Secure with Pin (146).
7. Slide Sleeve (140) over Bucket (145) and secure with Snap Ring (139).

### **2-Ton Models**

1. Assemble Hook (123) to Yoke (121).
2. Apply a liberal amount of grease to Thrust Bearing (120) and assemble Bearing Races (119) and Thrust Bearing to Collar (116).
3. Assemble Collar (116) over shank of hook and secure with Roll Pins (117) and (118).
4. Lubricate roller bearing of Sheave (114) and assemble Bearing Race (115) to Sheave.
5. Assemble Spacers (127), Sheave (114) and Shaft (128) to Yoke (121).
6. Assemble Washers (125) and Spacers (126) to Bolts (124) and (129) and secure Bolts to Shaft (128).
7. Feed load chain around sheave - with weld of standing links facing out from sheave and attach end of chain to Anchor Bracket (112) with Pin (111) and Retaining Rings (110).
8. Position Shrouds (130) on Lower Hook Assembly and secure with Washers (133) and Bolts (134).

## Pendent Control Assembly

1. Lubricate O-Rings (172) and assemble to Valves (171).
2. Assemble Valves (171) and Springs (170) to Handle (175).
3. Lubricate O-Rings (169) and assemble to Screws (168).
4. Assemble Screws (168) to handle securing valve components.

## Pendent Cylinder Assembly

1. Assemble Piston Rod (160) to Piston (159).
2. Lubricate and assemble O-Ring (158) to Piston (159).
3. Lubricate and assemble O-Rings (162) and (164) to Adapter (163).



## **Motor Assembly**

1. Lubricate Bearings (37) with NLGI #1 "EP" grease (33153) and assemble bearings to End Plate (38) and (43) - shielded side of bearing facing out.
2. Assemble End Plate (43) to Spindle (45) and slide up to shoulder of spindle.
3. Assemble Key (44) to key slot in Spindle (45).
4. Assemble Rotor (41) over spindle aligning key way and Key (44).
5. Assemble Cylinder (39) over Rotor (41) and insert Blades (42) into blade slots of rotor - straight side of blade out.
6. Assemble End Plate (38) to spindle and align hole in end plate with Roll Pin (40).
7. Secure assembled parts to spindle with Retaining Ring (36).
8. Assemble motor to housing.
9. Lubricate and assemble O-Rings (35) into counterbore of End Plate (38).
10. Assemble new Gasket (31) and head to housing.

# Trolley Assembly and Pull Chain Control Assembly

Figure 11. Trolley Assembly Drawing (MHP4730)



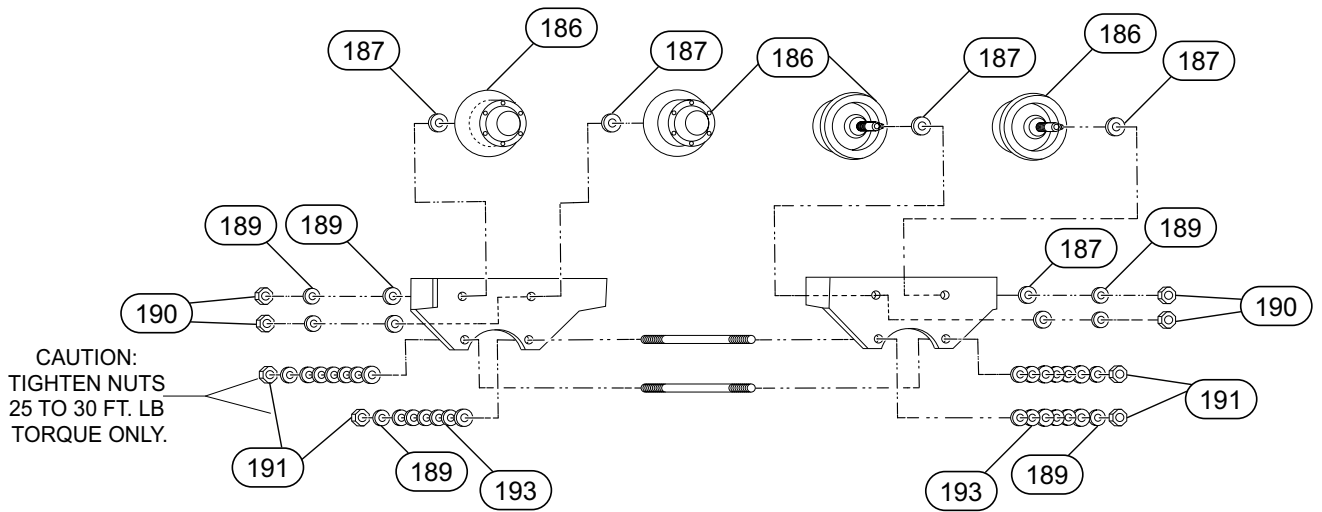


Figure 12. Pull Chain Control Assembly Drawing (MHP4736)

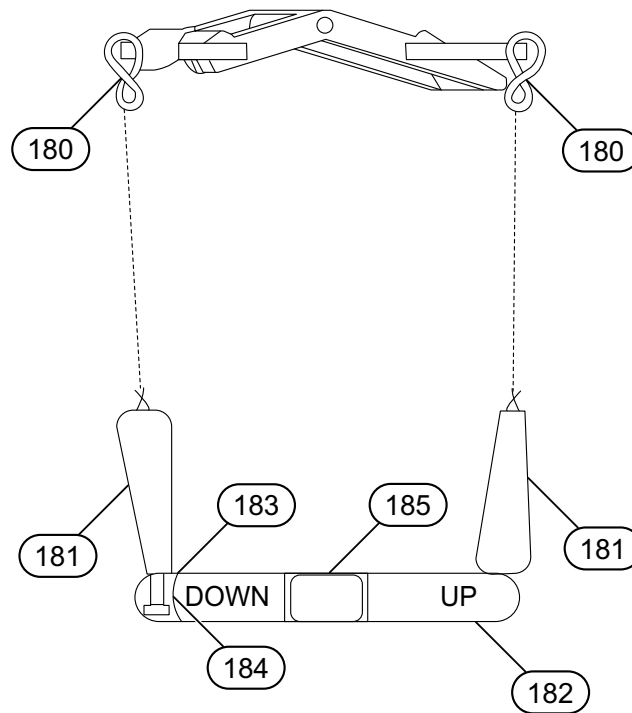

# Brake and Gearing Section Drawing

Figure 13. (MHP4731)

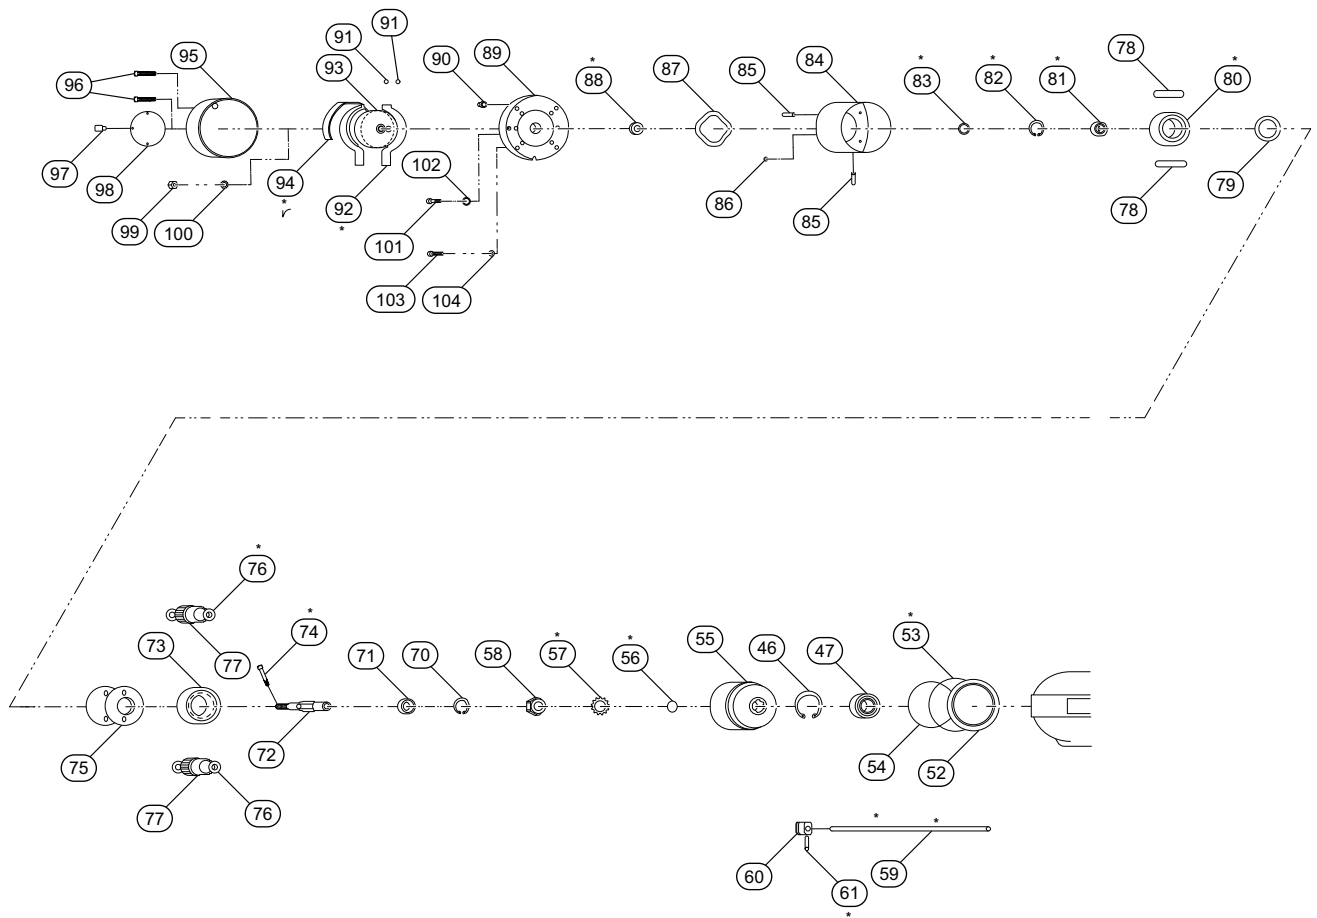

# Upper Hook and Lower Hook Assembly

Figure 14. Upper Hook Assembly Drawing (MHP4733)



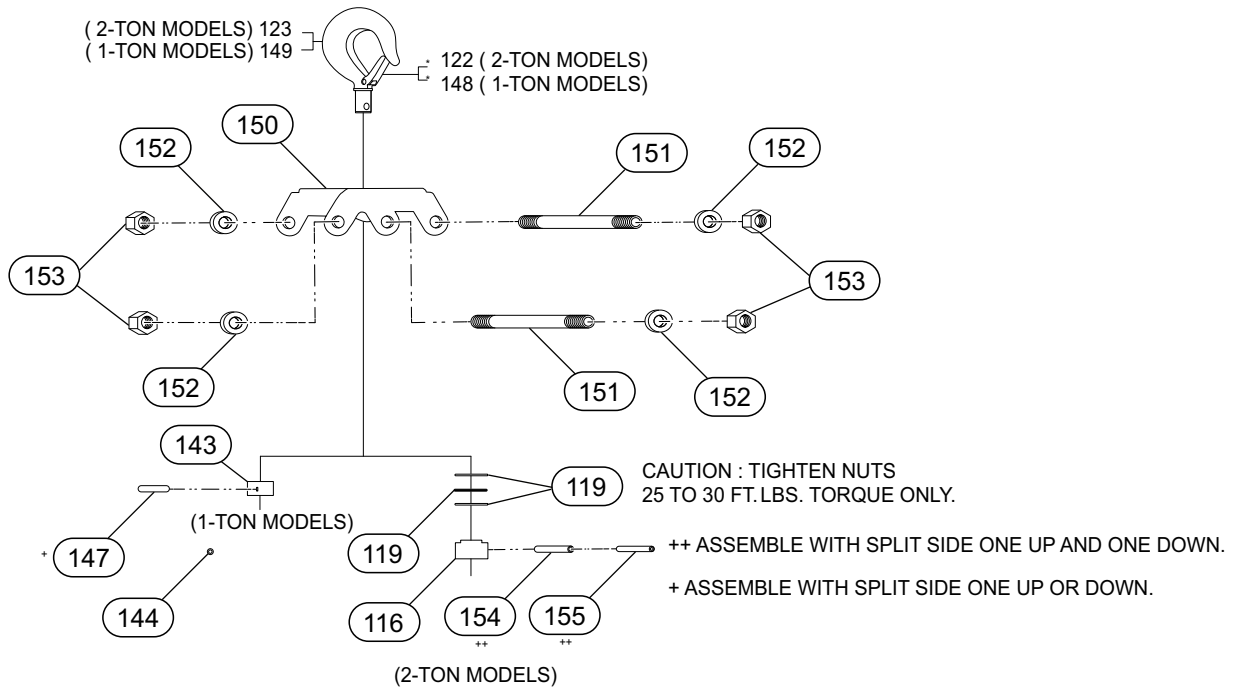


Figure 15. Lower Hook Assembly Drawing (MHP4732)

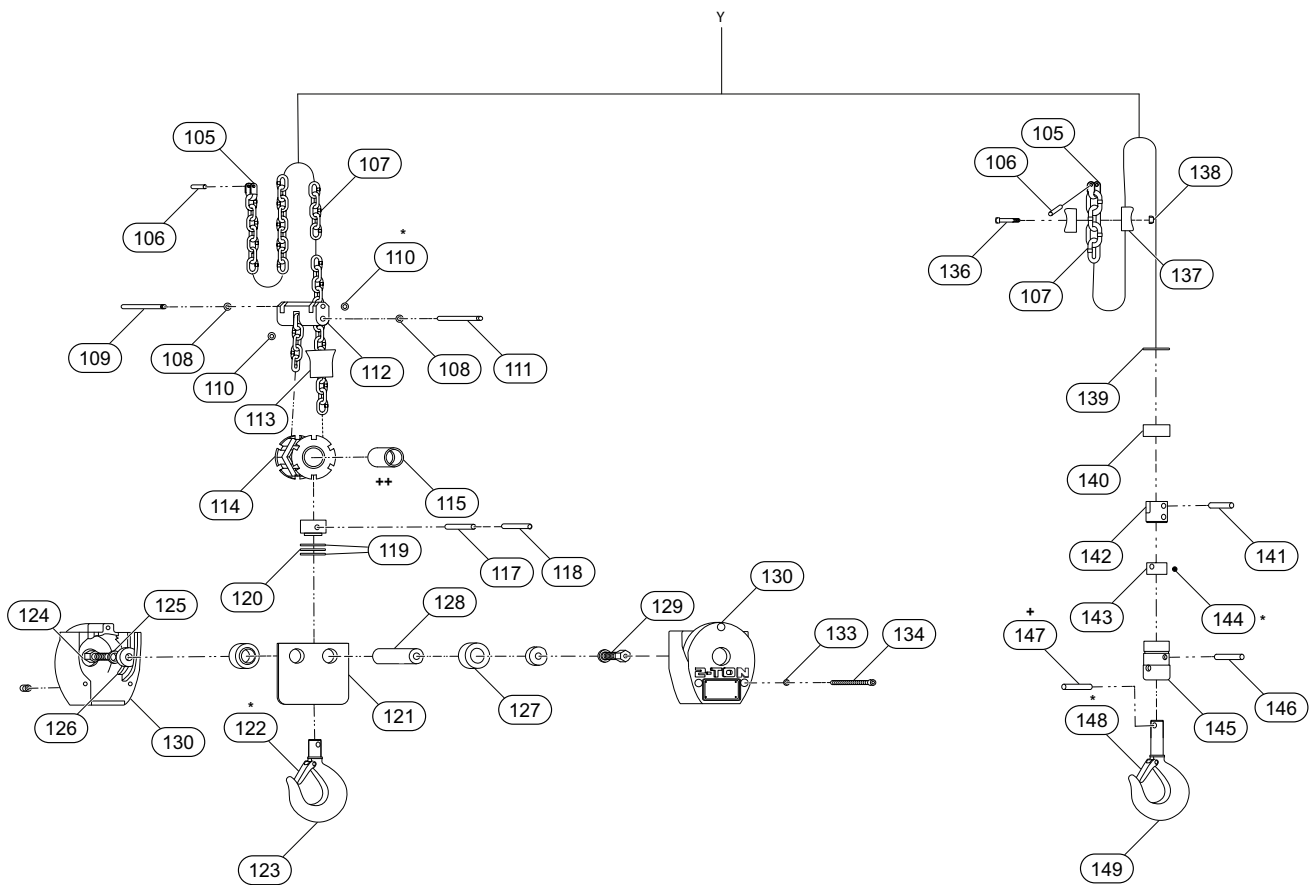


# Housing Assembly Drawing

Figure 16. (MHP4737)

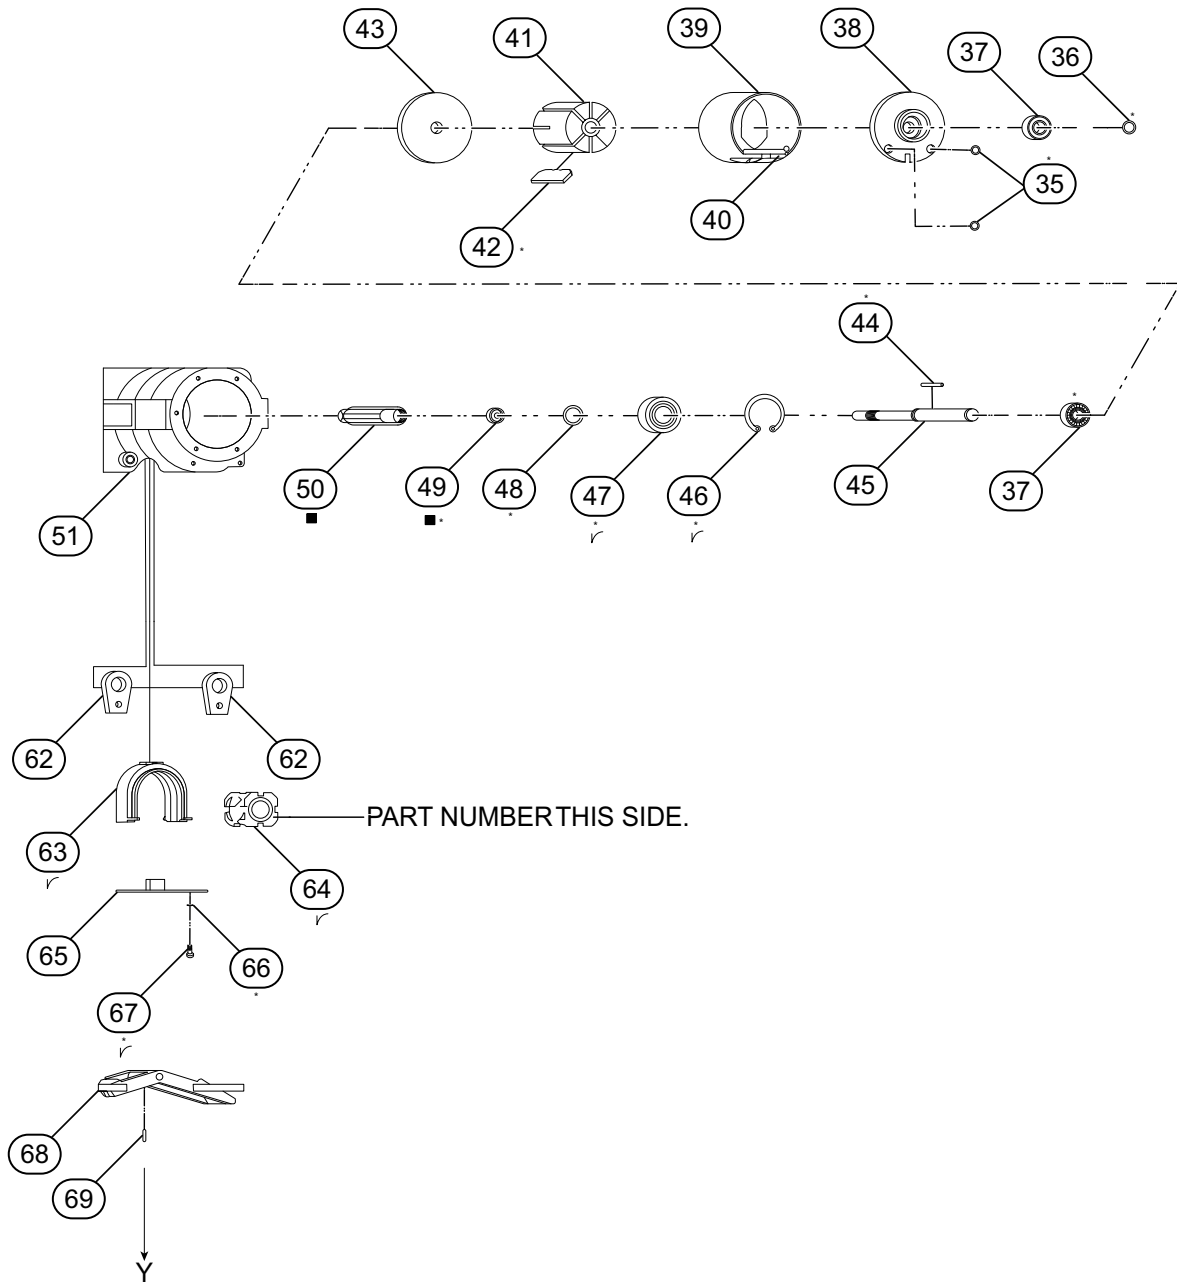

# Pendant Control Assembly Drawing

Figure 17. (MHP4734)

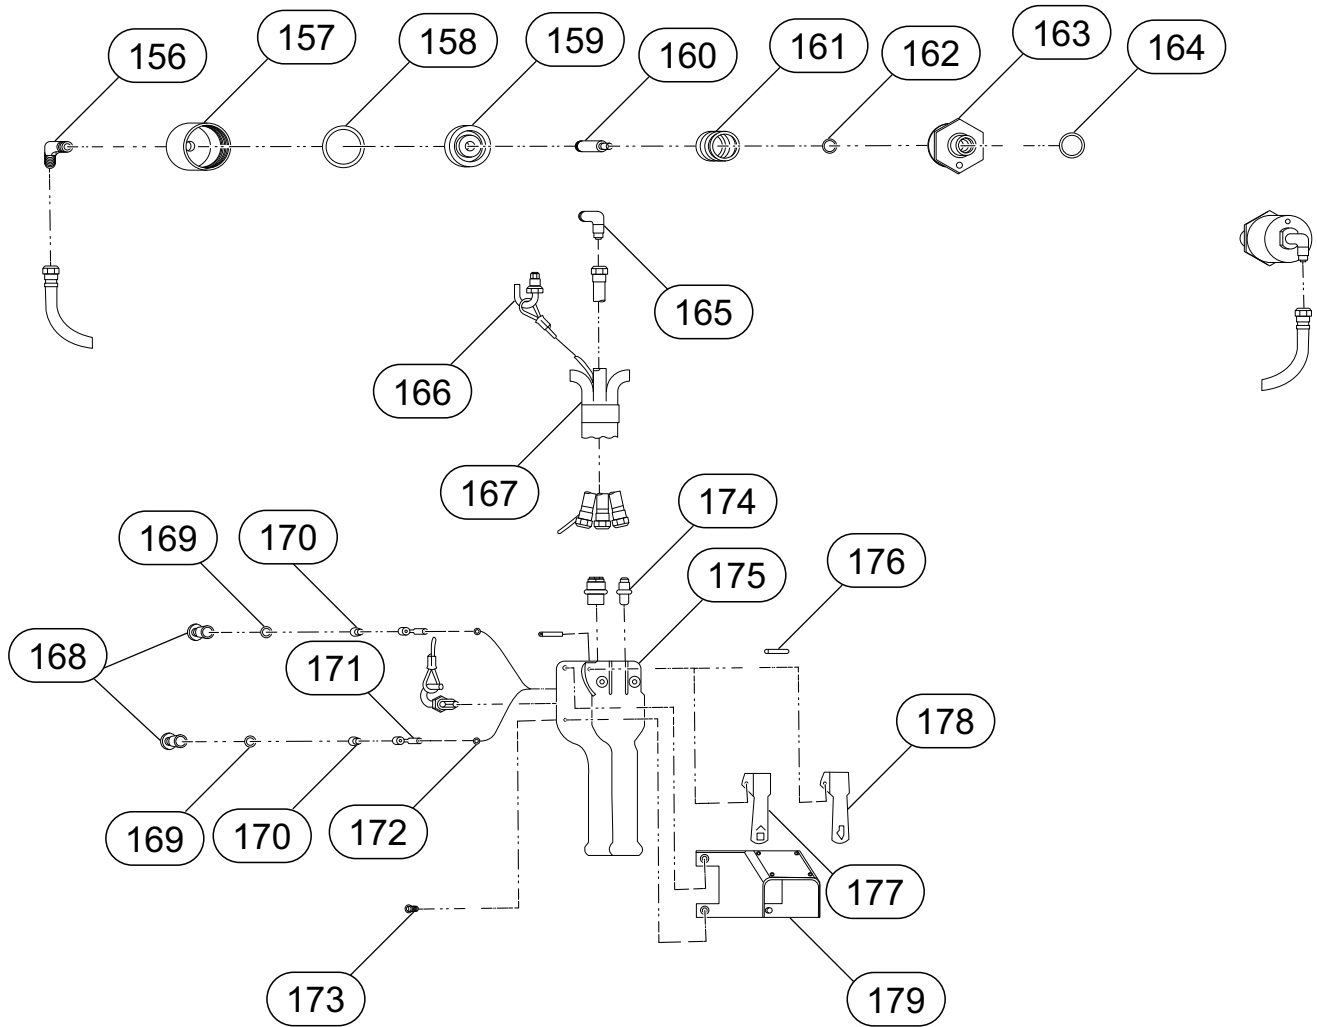

\* ITEMS INCLUDED IN SERVICE KIT PART NUMBER 41619-1.

✓ ITEMS INCLUDED IN SERVICE KIT PART NUMBER 41759.

■ ITEMS INCLUDED IN 43004 SHAFT ASSEMBLY

# 7790-A and 7792-A Series Parts List

Item No.	Description of Part	Part Number
	Head Assembly (standard models) includes items 1 thru 21, 24 thru 30, 33 and 34 with adapter (46211)	46126-2
	Head Assembly (spark-resistant models) (includes items 1 thru 19, 24 thru 30, 33, 34 and 59 with adapter 46212)	46126-3
1	Adapter	----
	for standard models	46211
	for spark-resistant models	46212
2	Screen	31648
3	Swivel	46839
	Swivel Kit (includes items 1 thru 3)	----
	for standard models (includes adapter 46211)	46840
	for spark-resistant models (includes adapter 46212)	46841
4	Retaining Ring	Y145-28
(a) 5	O-Ring (2 required)	Y325-115
6	Swivel Body	33314
(a) 7	O-Ring	Y325-17
(a) 8	Screen	46072
9	Cap Screw (2 required)	Y154-53
10	Washer (2 required)	Y14-10
11	Exhaust Deflector	42954
12	Screen	42957
(a) 13	Muffler Filler	42956
14	Head (includes roller bearing 33239 and three pipe plugs Y227-3, not shown)	46125
15	Valve Body	43079
(a) 16	O-Ring (2 required)	04614574
17	Lift Valve	43080
(a) 18	O-Ring (2 required)	Y325-25
19	Adapter (2 required)	40017
(a) 20	O-Ring (2 required) (not required with pendent control models)	Y325-116
21	Valve Cap (2 required) (not required with pendent control models)	34026
22	Cap Screw (6 required)	Y154-54
23	Washer (6 required)	Y14-10
24	Set Screw (2 required)	----
	for standard models	41598
	for spark-resistant models	41627-1
25	Gear	34022
(a) 26	Roll Pin	Y178-56
27	O-Ring (2 required)	Y325-111
28	Valve (2 required)	43107
29	Descent Valve	43081
30	Oilite Casting	33190
(a) 31	Gasket	43008
(a) 32	O-Ring	Y325-9
33	Washer (2 required)	31389
34	Oil Screw (2 required)	30747
(a) 35	O-Ring (2 required)	Y325-12

## 7790-A and 7792-A Series Parts List

Item No.	Description of Part	Part Number
	Motor Assembly (includes items 36 thru 45)	42977
(a)36	Retaining Ring	Y145-22
(a)37	Bearing (2 required)	42086
38	End Plate	43076
39	Cylinder (includes item 40)	43130
40	Roll Pin	Y178-73
41	Rotor	43068
(a)42	Blade (8 required)	43067
43	End Plate	42958
(a)44	Key	30934
45	Spindle	42959
(b)46	Retaining Ring (2 required)	Y147-200
(b)47	Bearing (2 required)	92962-ARO
(a)48	Retaining Ring	Y145-25
	Shaft Assembly (includes items 49 and 50)	43004
	Capacity Label (not shown)	---
	1000 kg (2200 lb.)	46067-3
	2400 lb.	44198-7
	2000 kg (4400 lb)	46067-4
	1500 lb.	44198-9
	3000 lb.	44198-10
(a)49	Seal	42149
50	Shaft	42960
51	Housing (includes item 52, pipe plug Y227-2-L, set screw Y29-44 and warning label 43640, not shown)	42996
	Nameplate (not shown)	41596
	Drive Screw (4 required) (not shown)	Y60-44
(b)52	Seal	42967
(a)53	O-Ring	Y325-46
(a)54	O-Ring	Y325-155
55	Ring Gear	42963
(a)56	O-Ring	Y325-211
(a)57	Washer	Y117-875
58	Nut	42964
59	Control Rod	46121
60	Brake Block	34029
61	Roll Pin	Y178-60
62	Hanger (2 required)	43033
(c)63	Chain Guide	42989
(c)64	Pocket Wheel	42961-ARO
65	Plate	42990
(a)66	Washer (6 required)	Y117-10
(b)67	Cap Screw (6 required)	Y154-52
68	Control Arm	43133
69	Roll Pin	Y178-55
	Gearing Assembly (includes items 70 thru 73 and 75 thru 83)	42976
70	Retaining Ring	42975
71	Bearing	41864



**7790-A and 7792-A Series Parts List**

<b>Item No.</b>	<b>Description of Part</b>	<b>Part Number</b>
72	Shaft	43072-1
73	Bearing	40048
(a)74	Cotter Pin	Y15-32
75	Carrier	42965
76	Bearing Race (4 required)	42364
77	Gear (2 required)	42971
78	Shaft (2 required)	42973
79	Spacer	42974
(a)80	Bearing	42968
(a)81	Bearing	Y65-12
(a)82	Retaining Ring	Y147-112
(a)83	Retaining Ring	Y145-18
	End Plate and Ring Gear Assembly (includes items 84 thru 89, 101 and 102)	43003
84	Fixed Ring Gear	42966
85	Roll Pin (2 required)	Y178-101
86	O-Ring (6 required)	Y325-10
87	Wave Washer	40041
(a)88	Seal	04565511
89	End Plate (Includes item 88, bracket 42980-1 and roll pin Y178-44, not shown)	43118
90	Screw	37701
91	Ball (2 required)	Y16-10
(a)92	Brake Shoe (2 required)	42994
93	Brake Wheel	43071-1
(b)94	Brake Spring	42982
95	Housing Cap	42979
96	Cap Screw (2 required)	Y154-54
97	Drive Screw (4 required)	Y60-43
98	Capacity Plate	----
	1500 lb.	45278
	1 ton	41589
	2400 lb.	43116
	3000 lb.	43050
	2 ton	----
(a)99	Nut	Y12-106-C
(a)100	Washer	Y117-616
101	Shoulder Screw (4 required)	42993
102	Washer (4 required)	Y1-416-C
103	Cap Screw (4 required)	Y99-41
104	Washer (4 required)	30997
105	Clevis	34987
106	Roll Pin	Y178-104
107	Link Chain	----
	for 1 ton, standard models, 10 ft (3 m) lift	42988-11
	for 2400 and 3000 lb, spark-resistant models, 10 ft (3 m) lift	43095-22
108	Retaining Ring (2 required)	Y145-8
109	Anchor Pin	43020
(a)110	Retaining Ring (2 required)	Y145-2

## 7790-A and 7792-A Series Parts List

Item No.	Description of Part	Part Number
111	Pin	42970
112	Anchor Bracket	43034
113	Chain Stop	43051-1
	Yoke And Hook Assembly with steel hook, for standard 2 ton models (includes items 114 thru 123)	43047
	Yoke And Hook Assembly with bronze hook, for 2400 and 3000 lb spark-resistant models (includes items 114 thru 123)	43099
	Lower Block Assembly for standard 2 ton models (includes items 114 thru 129 with steel hook)	43048
	Lower Block Assembly for spark-resistant models (includes items 114 thru 129 with bronze hook)	43101
114	Sheave and Bearing	43046
115	Bearing Race	43041
	Upper Hook Assembly for standard 2 ton models (includes items 116, 119, 120, 122, 123, 150, 154 and 155 with steel hook)	43049
	Upper Hook Assembly for 2400 and 3000 lb spark-resistant models (includes items 116, 119, 120, 122, 123, 150, 154 and 155 with bronze hook)	43096
116	Collar	43032
117	Roll Pin	Y178-128
118	Roll Pin	Y178-117
119	Bearing Race (2 required)	37391
120	Thrust Bearing	37392
121	Yoke	43037
	Steel Hook for standard 2 ton models (includes item 122)	43031
	Bronze Hook for 2400 and 3000 lb spark-resistant models (includes item 122)	43083
(a)122	Safety Latch (includes bolt, nut and spring)	420230
123	Hook	----
124	Bolt	Y5-85-C
125	Washer (2 required)	Y14-816
126	Spacer (2 required)	43039
127	Spacer (2 required)	43042
128	Shaft	43038
129	Bolt (includes grease fitting 35323)	40072
130	Shroud (2 required)	----
	for standard 2 ton models	43043
	for 2400 lb models (includes capacity plate 43123 and four drive screws Y60-30, not shown)	43121
	for 3000 lb models (includes capacity plate 45281 and four drive screws Y60-30, not shown)	45282
133	Washer (3 required)	Y14-416
134	Cap Screw (3 required)	Y99-49
135	Nut (3 required)	Y242-12-B
	Chain Stop Assembly (includes items 136 thru 138)	43128
136	Cap Screw	Y99-44
137	Chain Stop (2 required)	43127
138	Nut	Y107-4-Z
139	Snap Ring	42999
140	Sleeve	42998
141	Pin	43702-1

**7790-A and 7792-A Series Parts List**

<b>Item No.</b>	<b>Description of Part</b>	<b>Part Number</b>
142	Connector	43028
	Lower Hook Assembly for 1 ton models (includes items 143 thru 145 and 147 thru 149 with steel hook)	43000
	Lower Hook Assembly for 1500 lb spark-resistant models (includes items 143 thru 145 and 147 thru 149 with bronze hook)	43110
	Upper Hook Assembly for standard 1 ton models (includes items 143, 144 and 147 thru 150 with steel hook)	43002
	Upper Hook Assembly for 1500 lb spark-resistant models (includes items 143, 144 and 147 thru 150 with bronze hook)	43097
143	Collar	34321
(a)144	Ball (11 required)	Y16-10
145	Bucket	43019
146	Pin	43702-2
147	Roll Pin	Y178-122
(a)148	Safety Latch (includes bolt, nut and spring)	35023
149	Hook	----
	Steel Hook for standard 1 ton models	34337
	Bronze Hook for 1500 lb spark-resistant	34651
150	Bracket	----
	for 1 ton and 1500 lb models	42997
	for 2 ton, 2400 and 3000 lb models	43030
151	Mounting Rod (2 required)	43001
152	Washer (4 required)	46049
153	Nut (4 required)	46049
154	Roll Pin	Y178-128
155	Roll Pin	Y178-117
	Cylinder Assembly (2 required) (includes items 156 thru 164)	43017
	Pendent Control Assembly (includes items 156 thru 179)	43106-6
156	Elbow	Y54-23
157	Cylinder	41064-1
158	O-Ring	Y325-222
159	Piston	41066
160	Piston Rod	42955
161	Spring	33981
162	O-Ring	Y325-13
163	Adapter	41067
164	O-Ring	Y325-116
165	Elbow	Y54-23
166	Adapter (2 required)	33989
167	Hose Assembly (includes hoses and strain cable)	43103-6
	Handle Assembly (includes items 168 thru 179)	43102
168	Screw (2 required)	37511
169	O-Ring (2 required)	Y325-111
170	Spring (2 required)	32858
171	Valve (2 required)	34757
172	O-Ring (2 required)	Y325-6
173	Screw (4 required)	Y61-85-C
174	Connector (3 required)	Y54-2
175	Handle	43122
176	Roll Pin (2 required)	Y178-58

## 7790-A and 7792-A Series Parts List

Item No.	Description of Part	Part Number
177	Lever (up)	45616-2
178	Lever (down)	45616-1
179	Guard Assembly (includes warning plate 44197 and four rivets 45119)	44312
	Pull Chain Control Assembly (includes items 180 thru 185)	40004-5
180	"S" Hook (2 required)	37659
181	Handle (2 required)	33268
182	Control Handle (includes item 185)	44806
183	Sash Chain (2 required)	37657-5
184	Anchor (2 required)	37723
185	Warning Label	44596
	Trolley Assembly	----
	for spark-resistant models (includes items 186 thru 196)	----
	for 1 ton models	7763-BC
	for 2 ton models	7764-BC
	for standard models (includes items 186 thru 194)	----
	for 1 ton models ("I" Beam)	----
	for 1 ton models ("H" Beam)	7795-FT
	for 2 ton models ("I" Beam)	7796
	for 2 ton models ("H" Beam)	7796-FT
186	Trolley Wheel (4 required)	----
	for "I" Beam mounting	----
	for standard 1 ton models	41015
	for spark-resistant 1 ton models	41015-1
	for standard 2 ton models	40149
	for spark-resistant 2 ton models	40149-1
	for "H" Beam mounting (flat tread wheel)	----
	for standard 1 ton models	45376
	for standard 2 ton models	45377
187	Spacer (8 required)	----
	for 1 ton models	41022
	for 2 ton models	Y13-12-C
188	Side Plate (2 required)	43052
189	Lock Washer (8 required)	Y14-750
190	Nut (4 required)	Y12-12
191	Nut (4 required)	46049
192	Shaft (2 required)	43009
193	Washer (84 required)	43014
194	Nameplate (not shown)	44081-1
195	Skid Bracket (4 required) (not shown)	44618-1
196	Rivet (8 required)	Y193-33

(a) \* Service Kit: includes items marked.

(b) ✓ \*Service Kit: includes items marked.

(c) ✓ Service Kit: includes items marked.

# Parts List for Model Identification and Spark Resistant

**Table 2. Model Identification**

Model No.	Upper Mounting	Type Control	Type Load Chain	Lb. (Kg.) Capacity
7790-A9	Hook Assembly 43002	Pull Chain	Link	2,200 (1000 Kg)
7790-A11	None <sup>(a)</sup>	Pull Chain	Link	
7790-A13	Hook Assembly 43002	Pendent	Link	
7790-A15	None <sup>(a)</sup>	Pendent	Link	
7792-A9	Hook Assembly 43049	Pull Chain	Link	4,400 (2,000 Kg)
7792-A11	None <sup>(a)</sup>	Pull Chain	Link	
7792-A13	Hook Assembly 43049	Pendent	Link	
7792-A15	None <sup>(a)</sup>	Pendent	Link	

<sup>(a)</sup> For Trolley Mounting - Trolley must be ordered Separately.

**Table 3. Spark Resistant Models**

Model No.	Upper Mounting	Type Control	Type Load Chain	Lb. (Kg.) Capacity
7790-A21	Hook Assembly 43097	Pull Chain	Link <sup>(a)</sup>	1,500 (680 Kg)
7790-A22	None <sup>(a)</sup>	Pull Chain	Link <sup>(a)</sup>	
7792-A21	Hook Assembly 43096	Pull Chain	Link <sup>(a)</sup>	2,400 (1,089 Kg)
7792-A22	None <sup>(a)</sup>	Pull Chain	Link <sup>(a)</sup>	
7792-A23	Hook Assembly 43096	Pull Chain	Link <sup>(a)</sup>	3,000 (1,361 Kg)
7792-A24	None <sup>(a)</sup>	Pull Chain	Link <sup>(a)</sup>	

<sup>(a)</sup> Stainless steel link chain and bronze hooks.





